
How to Read Your Water Meter

Locate Your Meter

Your meter is located inside your home, about one foot off of the floor in your basement. It could also be in a crawl space, pit in the floor, or utility room. It is not outside. The water usually comes in from the street side of the house. The meter sits on a water pipe that comes through the floor. The head of the meter is about three inches in diameter and has both a large sweep hand and a small red hand (low flow indicator).

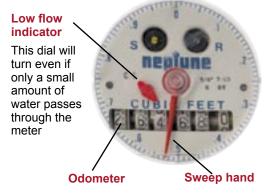

Read Your Meter

Read the six numbers on the odometer at the bottom of the meter, where it says cubic feet, from left to right.